


PCU-X11 WirelessHART Inclinometer – Installer Reference

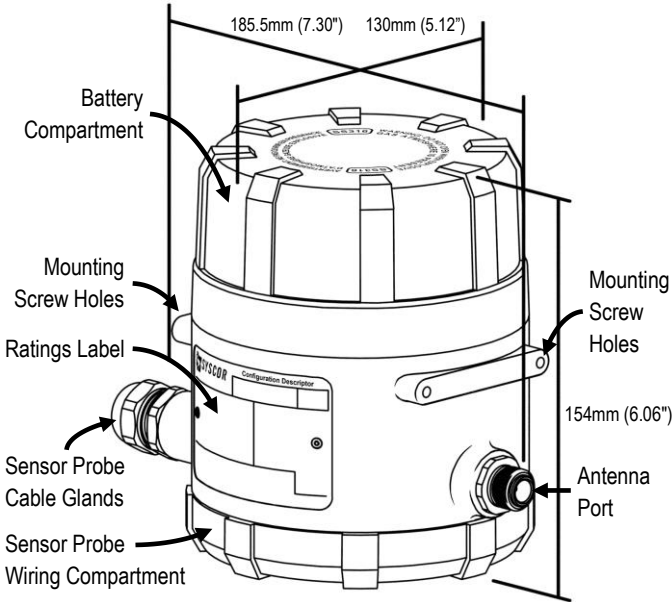

Syscor's battery-powered WirelessHART Inclinometer provides inclination monitoring with a precision of 0.1 degrees in both the X-axis and Y-axis. The 273.6Wh battery pack provides 10+ years of operational life. The Inclinometer may be used with attached Syscor sensor probes.

Safety Information

The PCU-X11 Inclinometer has been certified for operation in hazardous locations under the following parameters and conditions:

- Class 1, Division 1, Groups C, and D;
- Intrinsically safe Ex ia;
- Ambient temperature range -40°C to +60°C, Temperature Code T4;
- Pollution degree 4
- Water submersion to a depth of 1m (3.28 ft.)
- Enclosure is Type 4X and IP67

Specific Conditions of Use:


1. A passive antenna may be supplied by the manufacturer or provided by the customer. Permitted antennas must have <10 000mm² plastic surface when connected directly to the enclosure. Antennas connected through an extension cable are not subject to the plastic surface area restriction.
2. When a non-metallic antenna is connected directly to the enclosure, it is possible that under certain extreme circumstances, the non-metallic antenna may generate an ignition-capable level of electrostatic charge. Therefore, when a non-metallic antenna is connected to the enclosure without the use of an extension cable, the equipment shall be installed in a location where the external conditions are conducive to the build-up of electrostatic charge on such surfaces. In addition, the equipment shall only be cleaned with a damp cloth.
3. The HART maintenance port in the PCU must not be used in the hazardous area. When used in the non-hazardous area, a battery-powered HART Field Communicator with intrinsic safety approvals shall be used. Examples are the Emerson 375 or 475 HART Field Communicator, and the AMS Trex Device Communicator.

WARNING: Substitution of components not expressly specified by Syscor will void intrinsic safety certification.



WARNING: Do not open in an explosive gas atmosphere.

WARNING: Do not power on without first connecting an antenna.

Package 1 – Standard Configuration – Floating Roof Deck

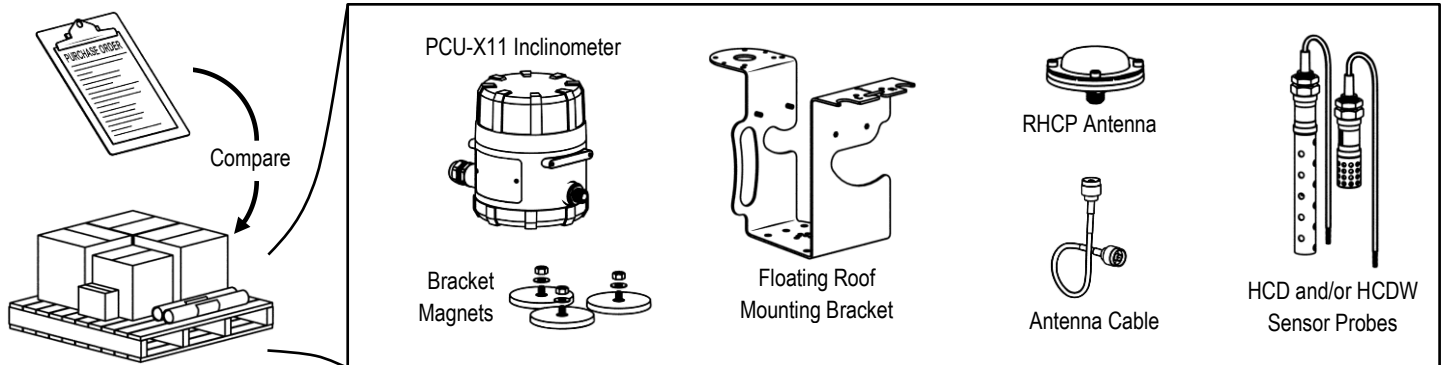


Package 1-1 – Mounting Bracket

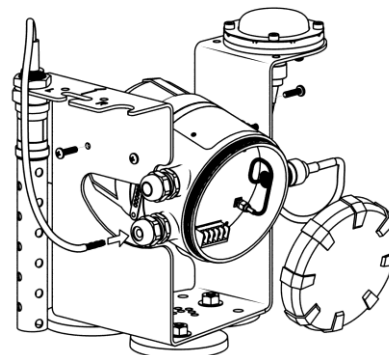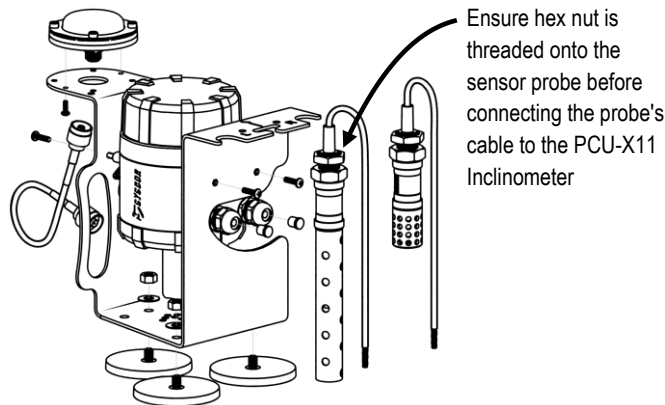


The wiring compartment may be accessed by removing the mounting screws on the closed side of the bracket and loosening the remaining screws to pivot the Inclinometer on to its side.




Package 1-2 – Wire Sensor Probes to Port 1 and Port 2. Use Port 1 when using a single Sensor Probe.

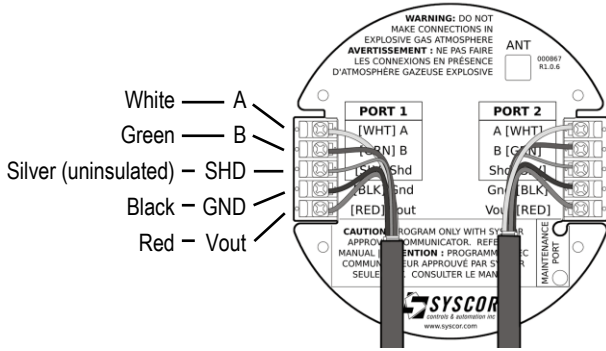

After wiring, tighten the port glands

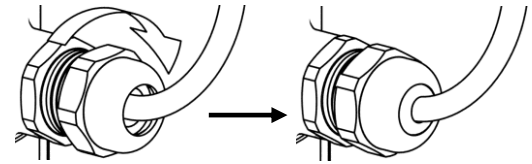


If a port is not used, insert the gland plug prior to tightening

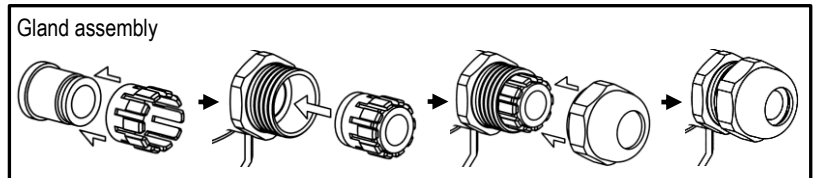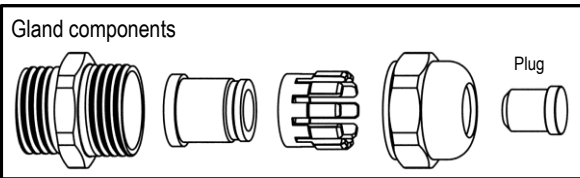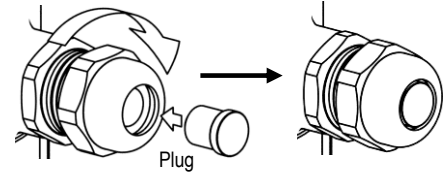


Package 1-3 – Power the Inclinometer


Requires an antenna connection

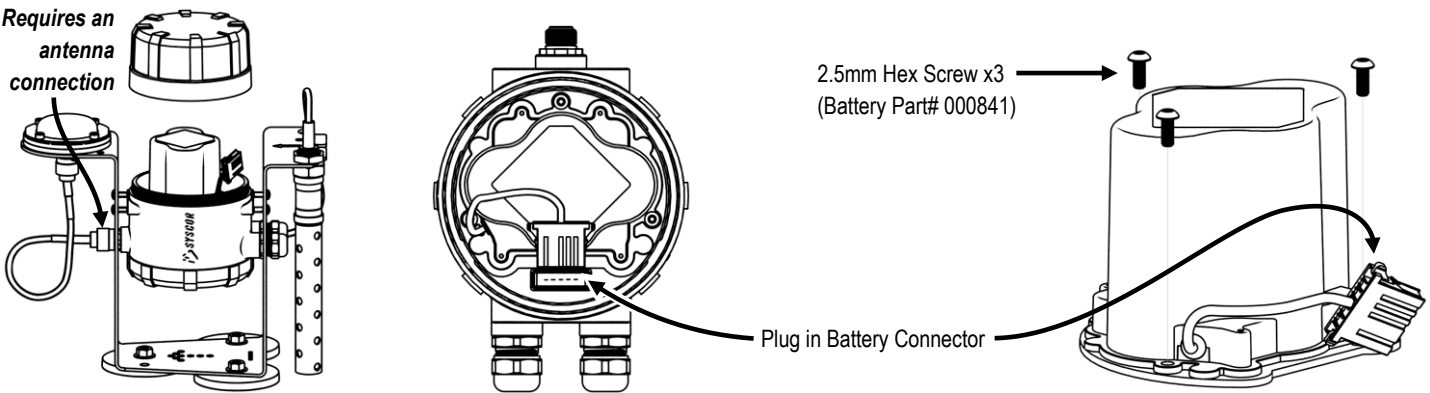


Package 1-4 – Floating roof deck mounting

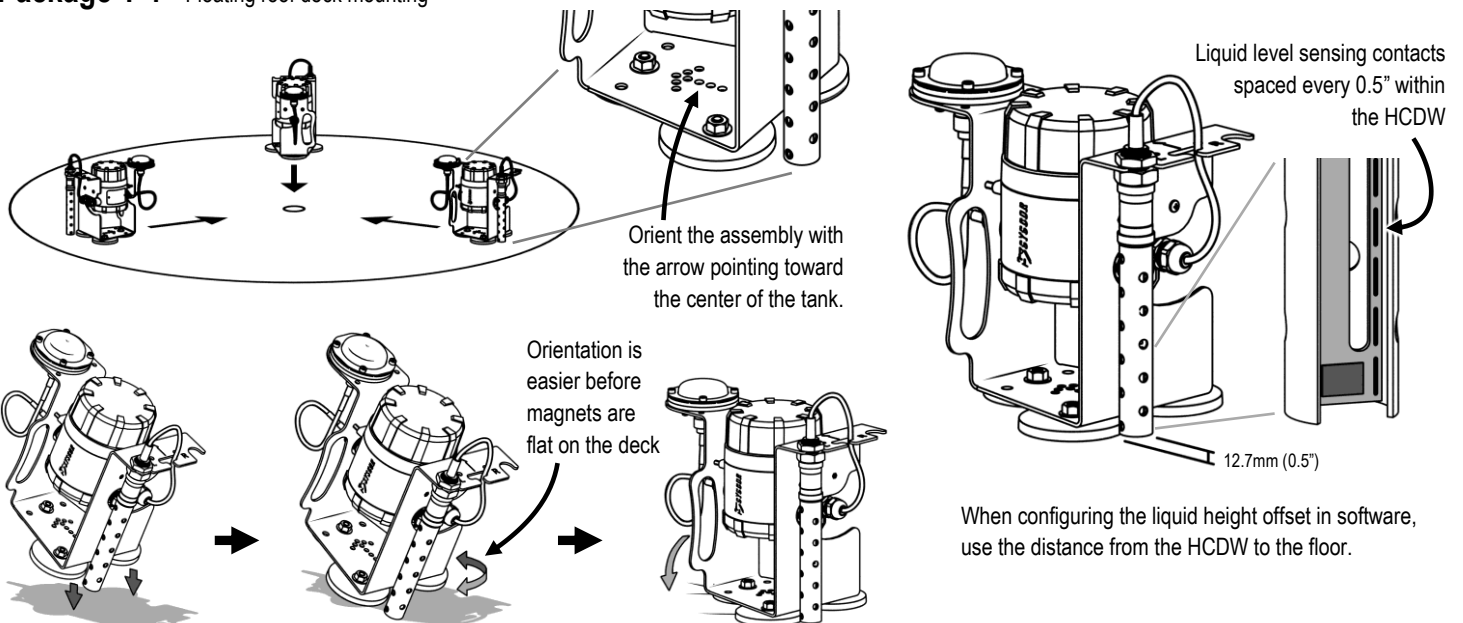

Package 2 – Standard Configuration – Floating Roof Ladder

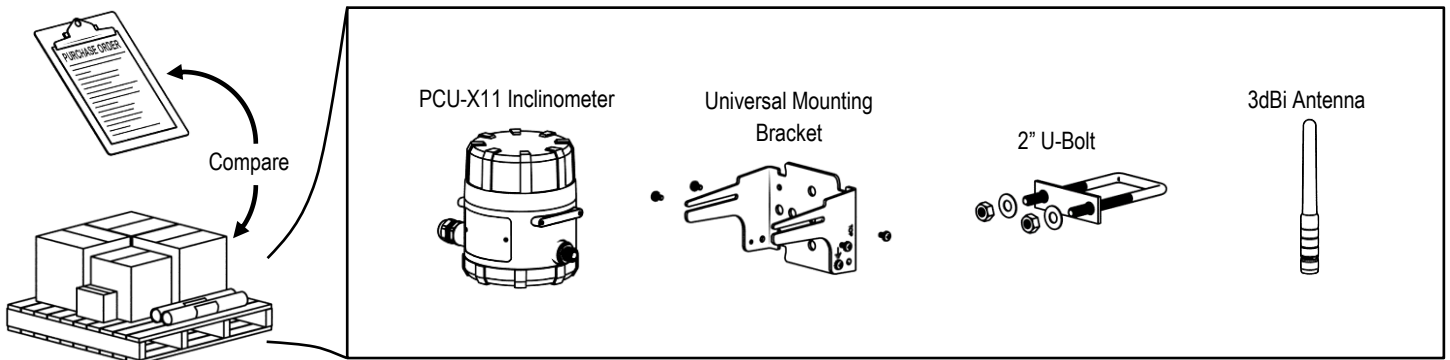


Package 2-1 – Mounting bracket

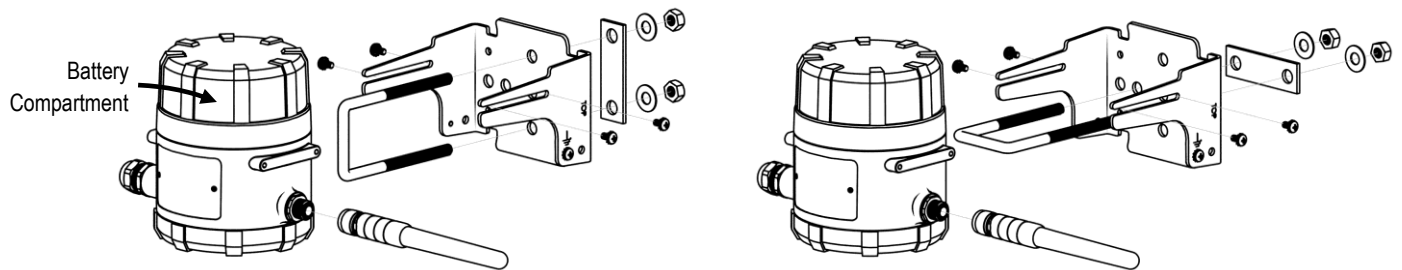


Keep the battery compartment facing skyward - Orient U-Bolt based on target mounting strut

Package 2-2 – Floating roof ladder mounting

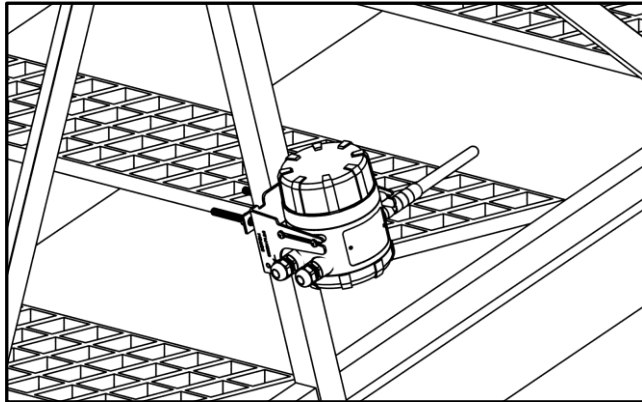


Vertical Strut

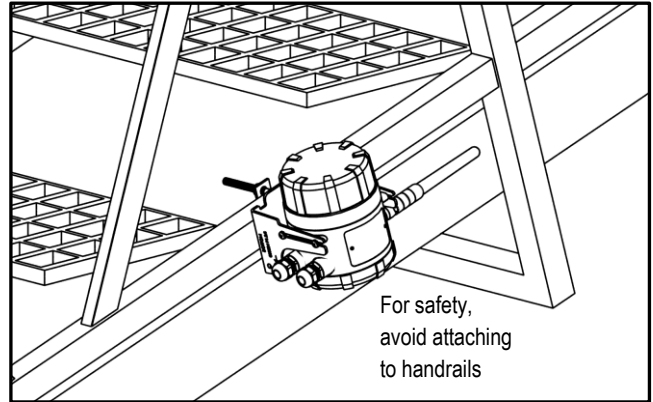


Horizontal Strut

For safety, avoid attaching to handrails

Package 2-3 – Power the Inclinometer

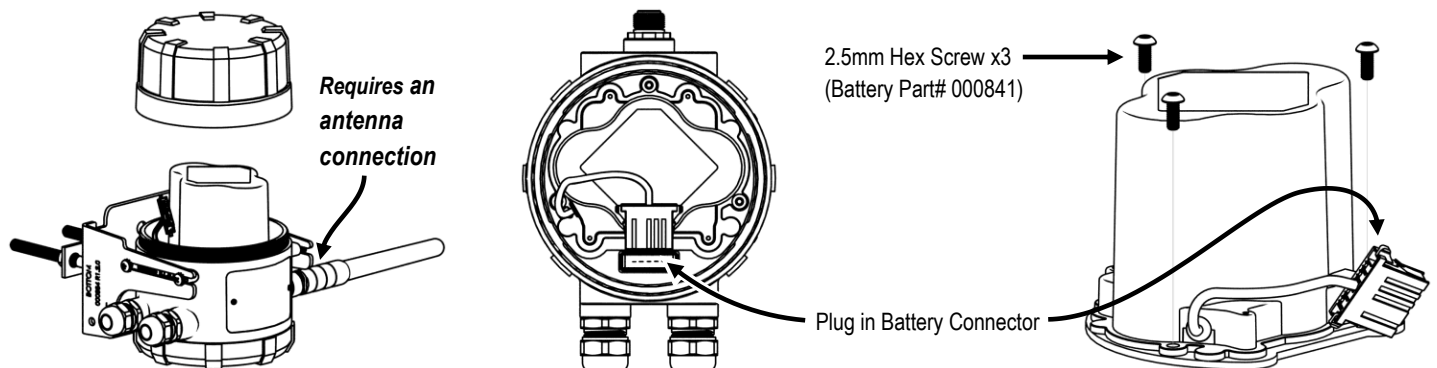



Inclination Values Reference

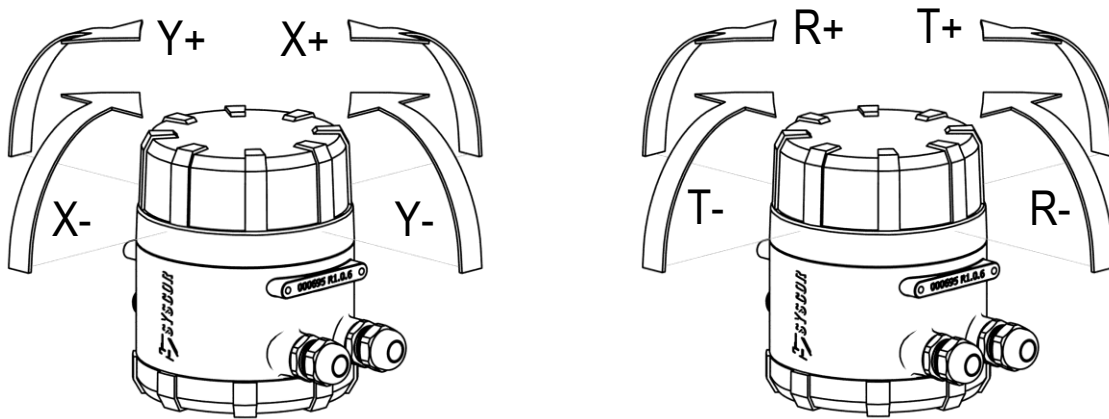


Floating roof mounted inclinometers may be configured to display T and R values (tangential and radial) in place of X and Y

Optional Swivel Base


The swivel base is an extension of the floating roof bracket designed to ease the fine-tuning of the inclinometer's orientation.

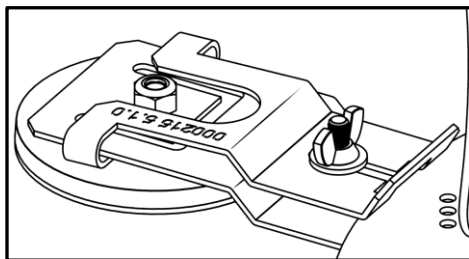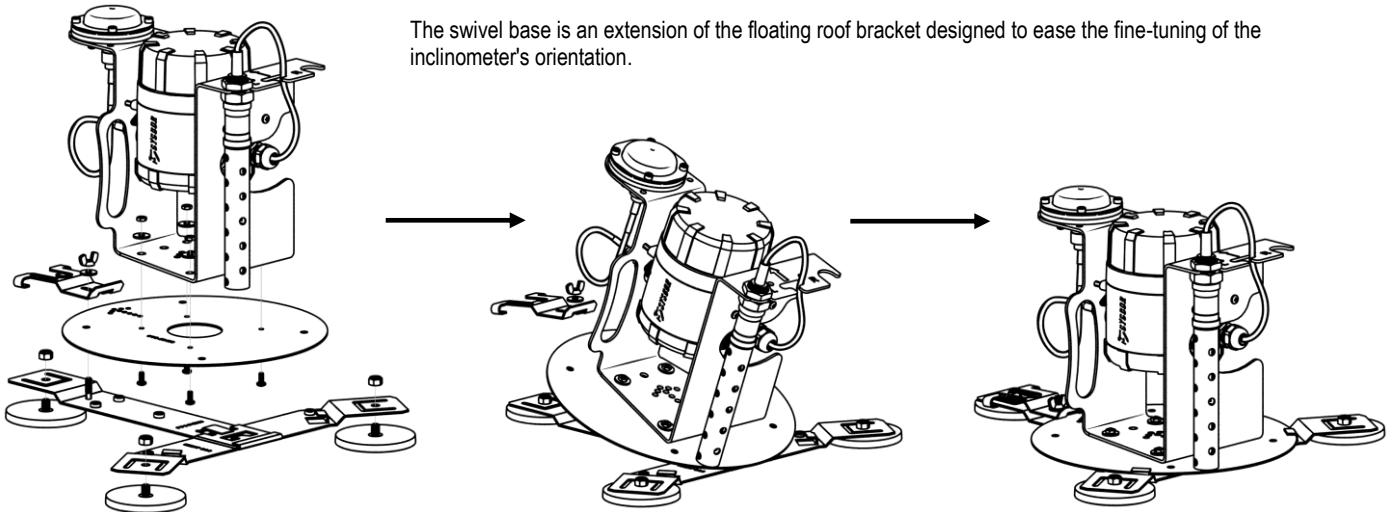

Detail of rotating disc catches and clamp

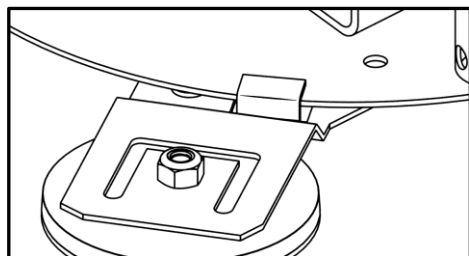

Loosen the wing nut to adjust rotation, then tighten to hold in place

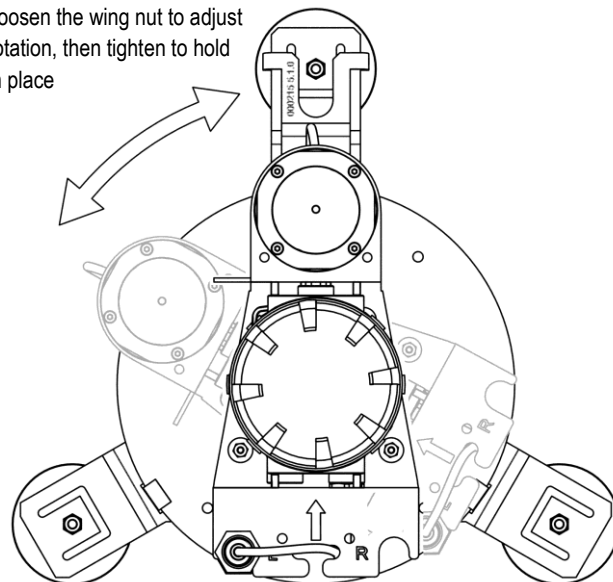


WirelessHART Networking

The PCU-X11 commonly comes with client-specific gateway join settings already loaded. The following box shows the default network ID and join key:


Network ID: 1234	Join Key: Part 1: 44555354 Part 2: 4E455457 Part 3: 4F524B53 Part 4: 524F434B
----------------------------	---

Change the Network ID and Join Key with a HART Field Communicator

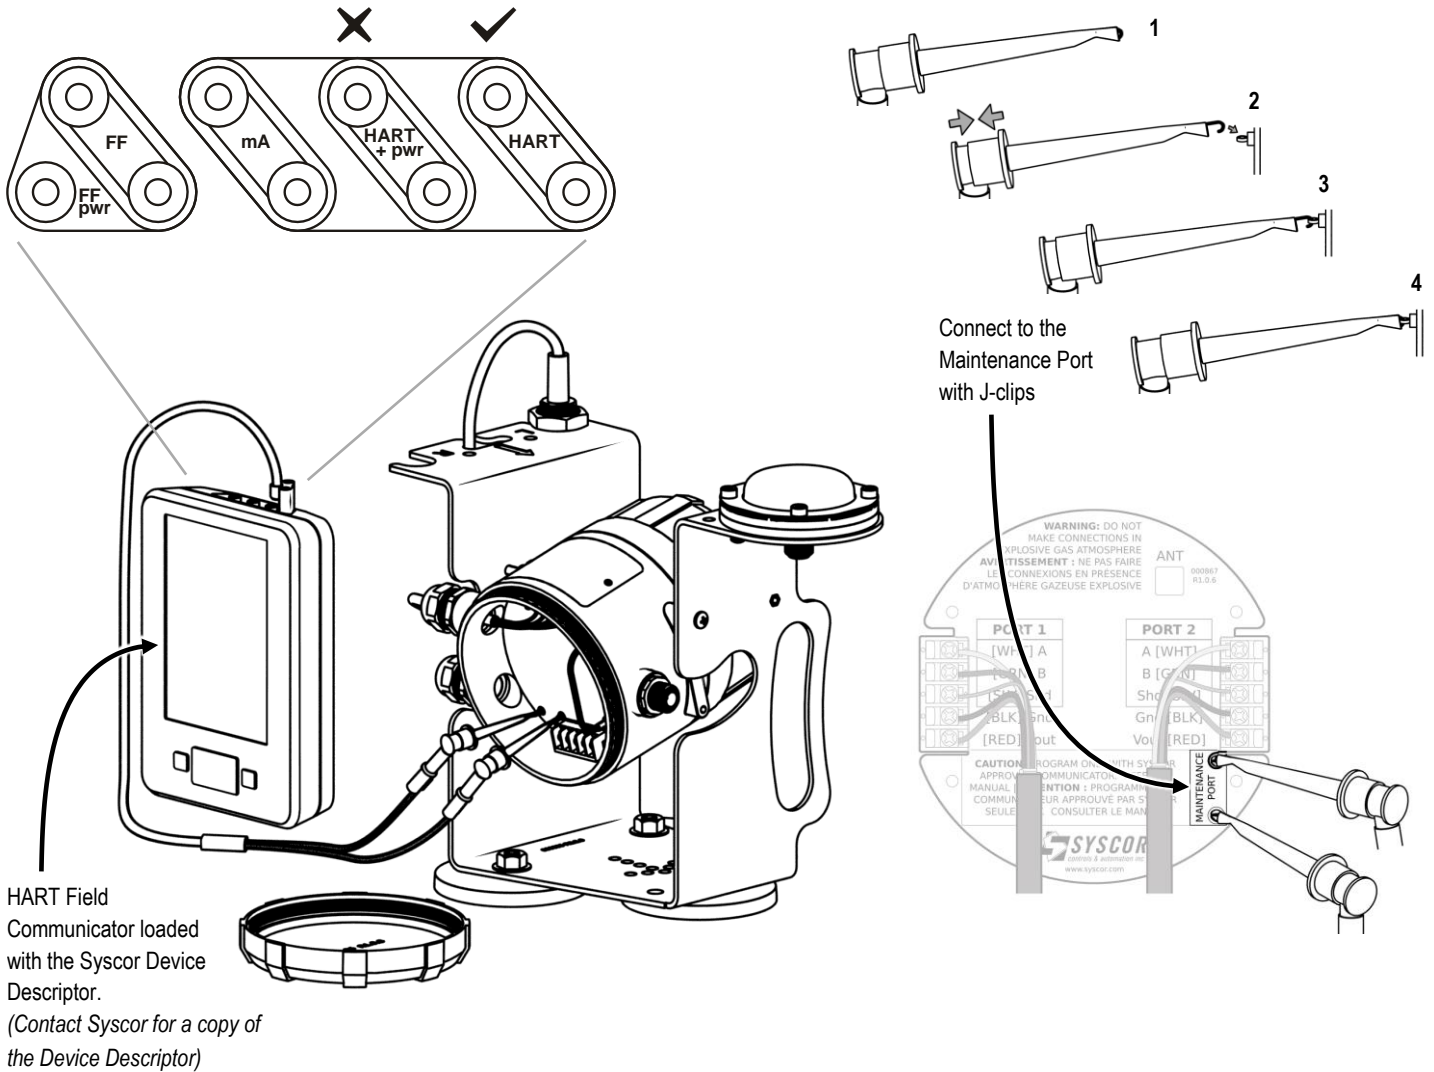

Using the Field Communicator

The following is the menu tree for the HART Field Communicator loaded with the PCU Device Descriptor.

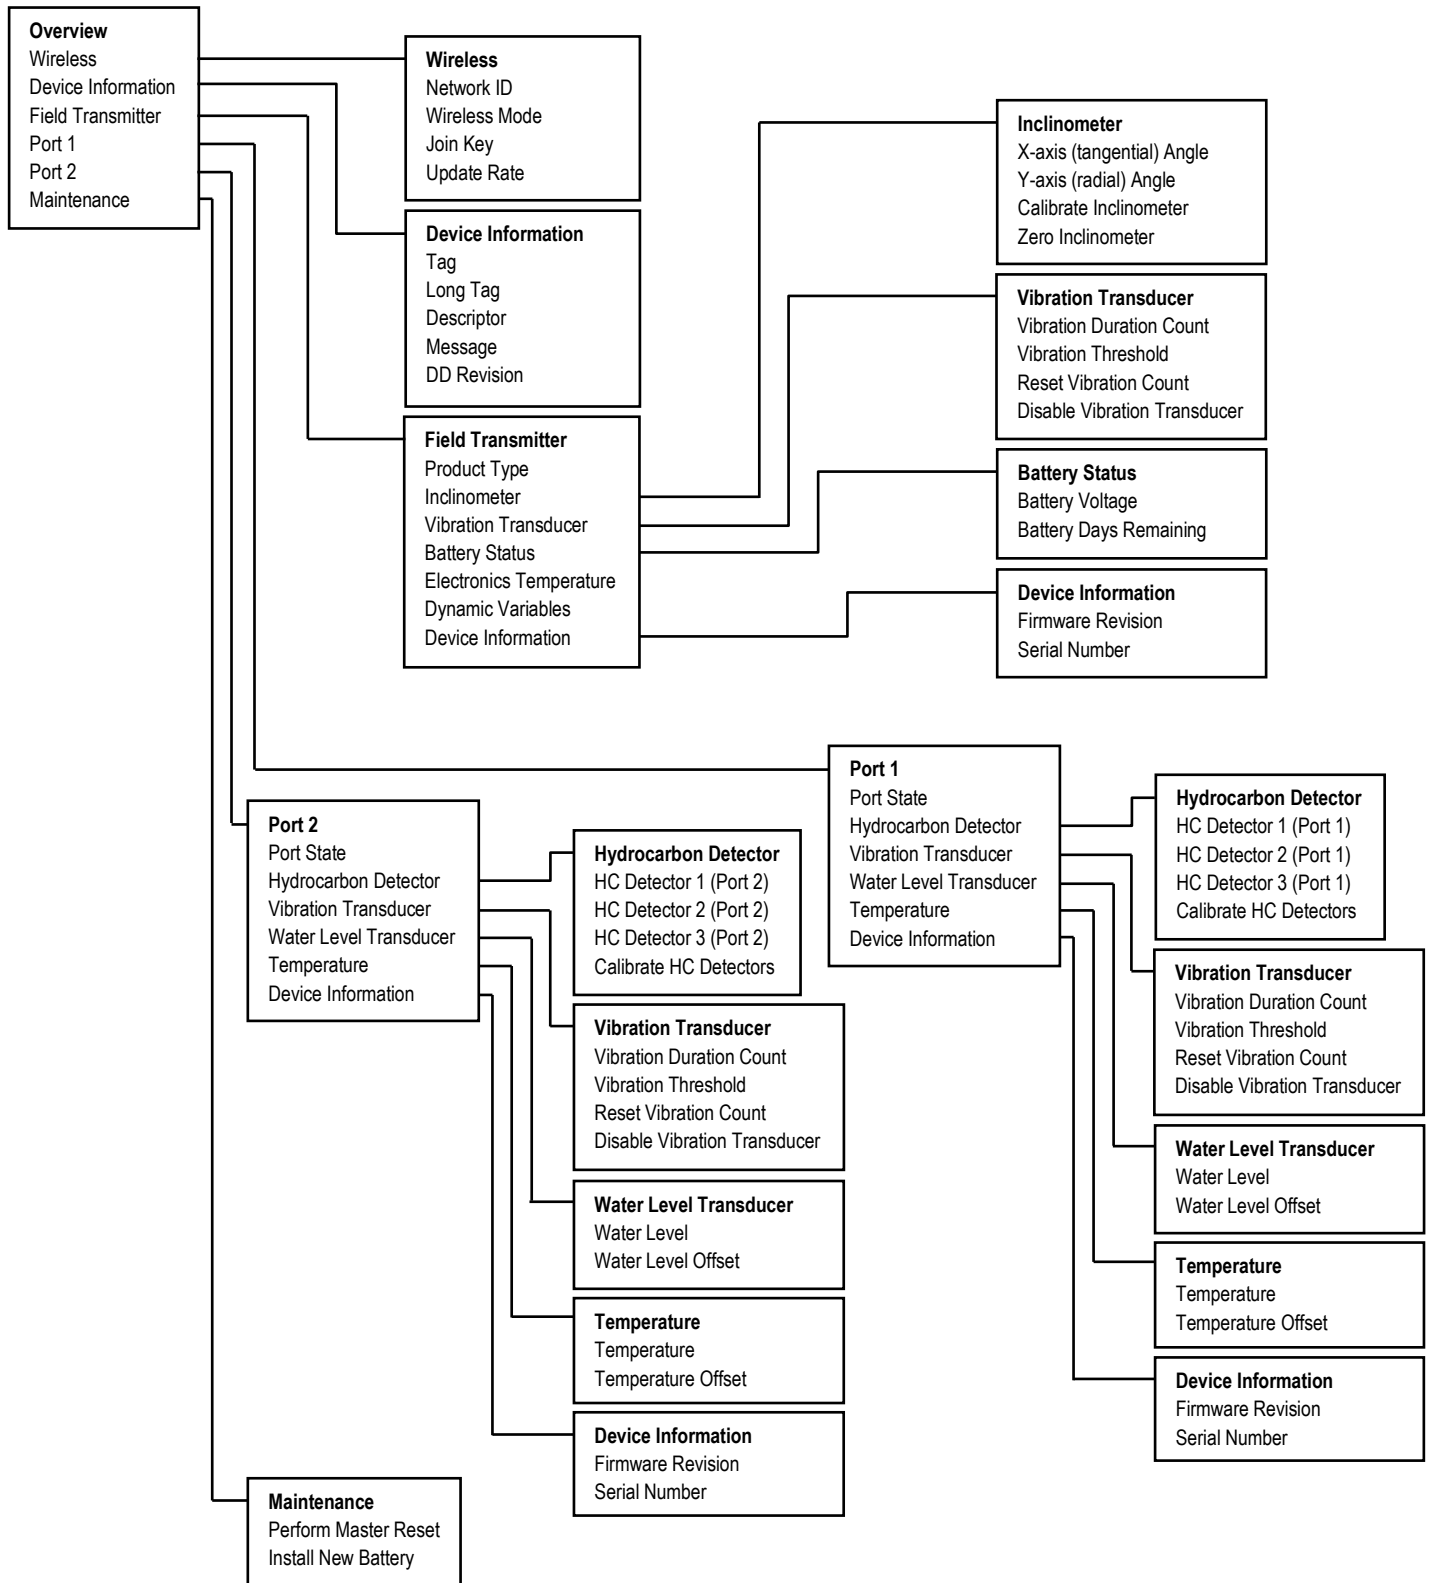


Syscor WiHART Config Tool – Example: Setting Liquid Height Offset

Syscor offers a software tool for adjusting settings remotely once a PCU-X11 has joined the WirelessHART Gateway.

Step 1 - Run syscor-wihart-config-tool.exe (no installation needed)

Name	Type
config.json	JSON File
syscor-wihart-config-tool.exe	Application

Step 2 - Connect to the gateway using the gateway's IP address and HART-IP port.

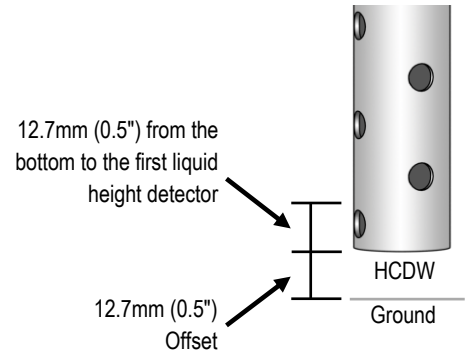

Step 3 - Select the PCU to be configured from the device list.

Step 4 - Select the 'Liquid Height' tab and click 'Get Data'

Step 5 - Set the offset in inches and click write

Syscor Controls & Automation Inc.

201-60 Bastion Square
Victoria, BC V8W 1J2, Canada
Toll Free (US & Canada): +1-833-361-1681
Tel: +1-250-361-1681
Fax: +1-250-361-1682
www.syscor.com

© 2023, Syscor Controls & Automation Inc., all rights reserved. The contents of this publication, or any part thereof, may not be reproduced or transmitted in any form by any means, electronic or mechanical, including photocopying, recording, storage in an information retrieval system, or otherwise, without the prior, written approval of Syscor.